#### **USER GUIDE**


#### **THERMOSTAT T90-EDV**

#### 17.02.24-01EN




## DESCRIPTION

- Electronic thermostat with "dual sensing" for electrical heating systems: radiant panels, underfloor heating, panel radiators etc.
- Equipped with a 3-position switch to select different function modes:
  - **Clock** = Night reduction with 4°C, by pilot wire (external clock)
  - **Comfort** = Normal operation
  - **Reduction** = Fixed reduction of 4°C
- Possibility to regulate either the room or floor temperature, or combined (in this case, the optional floor sensor is used as a temperature limiter).

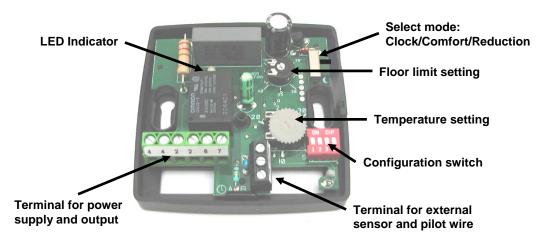

## **CONFIGURATION SWITCH**

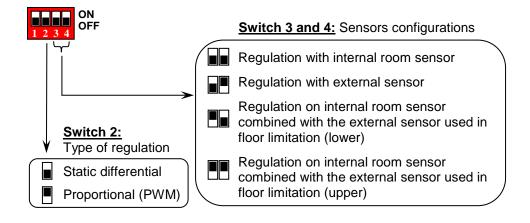

## LED INDICATOR

Red:	Heating indication		
Green:	Reduction mode by external clock (pilot wire)		
Orange:	Heating indication during reduction mode by external clock		
Green blinking:	0.5 second cycle 1 second cycle 2 seconds cycle	=>	Internal and external sensor failures Internal sensor failure External sensor failure

## **TECHNICAL CHARACTERISTICS**

Operating voltage, power supply	230V~ +/- 10%
Rated current / Relay	10A resistive load, 230V~
Appliance and protection class	Class II - IP30
Setting range, temperature	5°C – 30°C (41°F – 86°F)
Operating temperature	0°C – 50°C (32°F – 122°F)
Switching differential	0.1°C (0.2°F)
Regulation characteristics	Proportional band 10 min for 2K or static differential 0.5K
Floor limitation, temperature range	10°C – 40°C (50°F – 104°F)
Optional external floor sensor	NTC (10 kΩ), Class II, 3 meter

EN

# **ENERGOTECH**