
# **T99-ERS**30 86 86





Read this instruction before installation and wiring of the product

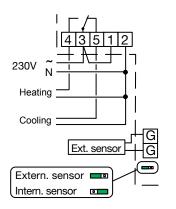

# INSTRUCTION

# One step room thermostat

T99-ERS is a single-step room thermostat with a change-over relay for either heating or cooling. The thermostat can not however be used for simultaneous control of both heating and cooling. T99-ERS may be used with the internal or an external sensor.

# **Installing**

- Remove the front cover by depressing the plastic tongue in the middle of the lower edge with a screwdriver. See fig 1.
- Mount the T99-ERS on the wall. The screw pockets have a c/c distance of 60 mm to fit on a wallbox.
- If the thermostat is to be used with the internal sensor it should be mounted approximately 1.5 m above floor level at a location with a representative temperature.
- Connect the wiring for the supply voltage, the output and, when used, the external sensor according to the wiring diagram.
- Set the jumper next to the sensor terminals to the position indicated for the choice of sensor you have made.
- As external sensor a Energotech TG-type sensor must be used

# **Technical data**

Supply voltage 230 VAC +/-15%, 50-60Hz. Relay 16A 230V AC change over.

Setting range 0...30°C.
Switching 1K.
differential IP30.

Protection class

# Wiring

8.11.02-01ML

1. 230 VAC Supply voltage.

Connect to terminal 3.

If the relay is to be used potential free, wire the supply voltage directly to terminal 1.

- Supply common.
- 3. Relay contact common.
- Relay contact heating.
- 5. Relay contact cooling.
- G-G External sensor.

### **ENGLISH**

# CE

# **Low Voltage Directive (LVD) standards**

This product conforms to the requirements of the European Low Voltage Directive (LVD) standards EN 60730-1 and EN 60730-2-1.

# **EMC emissions & immunity standards**

This product conforms to the requirements of the EMC Directive 2004/108/EC through product standards EN 61000-6-1 and EN 61000-6-3.

## **RoHS**

This product conforms to the Directive 2011/65/EU of the European Parliament and of the Council.

# **Contact**

Energotech AB Firmagatan 5 SE-213 76 Malmö, Sweden

Tel: +46 40 866 90 info@energotech.se www.energotech.com