


Protection Grille

PG16, PG20, PG30, PG45 and PG60

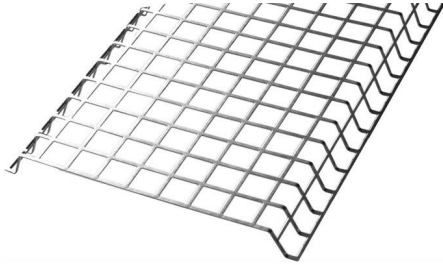

Mesh opening: 30x30 mm

| Type | Suitable for model | L (mm) | W (mm) | H (mm) | Kg |
|-------------|--------------------|--------|--------|--------|-----|
| PG16 | EE16 | 1224 | 286 | 29.5 | 1.1 |
| PG20 | EE20 | 1554 | 286 | 29.5 | 1.4 |
| PG30 | EIR3000 | 762 | 286 | 29.5 | 0.7 |
| PG45 | EIR4500 | 1125 | 286 | 29.5 | 1.0 |
| PG60 | EIR6000 | 1422 | 286 | 29.5 | 1.3 |

Assembly Instruction

Protection grille, PG series, is easy to mount. The work can be done quickly and easily without any need of making holes for screws, bolts or similar. Use work gloves for all mounting and beware of any sharp corners and edges.



If the protection grille is retrofitted to existing heater - Make sure it have cooled down first!



Care should be taken, to prevent scratching the aluminium panel or reflector.

1. Lay heater on flat surface, on a workbench or protected on the floor.
2. Remove lid and end-cap by loosening the screws on the short ends of the heater.

The heater is now slightly flexible, which facilitates the installation of the protection grille.

3. Place the protection grille by positioning and centering it lengthwise.

Starting from either long side, insert the protection grille between the inner sheet steel/reflector and the outer body/edge. Ensure that the clips are fixed in its positions.

Now, insert the other long side of the protection grille against the corresponding long side of the heater. Ensure that the clips are fixed in its positions.

4. Refit lid and end-cap, and make sure that the screws are tightened.

5. Done!

